

Acue Lighting 17R Spot Hybrid Moving Head

<u>DMX 23 Channel</u>		
<u>Channel</u>	<u>DMX Range</u>	<u>Function</u>
COLOR		
CH1	0~18	White
	19~127	Color Selection
	128~255	Color Scroll: Slow to Fast
	SHUTTER	
CH2	0~3	Shutter Closed
	4~7	Shutter Open
	8~97	Strobe: Slow to Fast
	98~101	Shutter Closed
	102~126	Open Pulse: Slow to Fast
	127~151	Close Pulse: Slow to Fast
	152~155	Shutter Open
	156~180	Random Open Pulse: Slow to Fast
	181~205	Random Close Pulse: Slow to Fast
	206~209	Open Shutter
	210~249	Random Strobe: Slow to Fast
250~255	Shutter Open	
CH3	0~255	Master Dimmer: 0-100%
GOBO		
CH4	0~3	White
	4~59	Gobo Selection
	60~103	CCW Rotation: Fast to Slow
	104~147	CW Rotation: Slow to Fast
	148~255	Single Gobo Shake
GOBO 2		
CH5	0~7	White
	8~71	Gobo Selection
	72~127	CW Rotation: Slow to Fast
	128~255	Single Gobo Shake
GOBO 2 ROTATION		
CH6	0~63	Manual Control: 0-360°
	64~127	CW Rotation: Fast to Slow
	128~191	CCW Rotation: Slow to Fast
	192~207	Shake: Slow to Fast, 90°
	208~223	Shake: Slow to Fast, 180°
	224~239	Shake: Slow to Fast, 270°
240~255	Shake: Slow to Fast, 360°	
IRIS		
CH7	0~87	Open to Close: 0-100%
	88~127	Open and Close: Slow to Fast
PRISM		
CH8	0~127	No function
	128~255	Insert Prism
PRISM ROTATION		
CH9	0-63	Manual Rotation: 0-360°
	64~127	CCW Rotation: Fast to Slow
	128~191	CW Rotation: Slow to Fast
	192~207	Prism Shake: Slow to Fast, 60°

	208~223	Prism Shake: Slow to Fast, 120°
	224~239	Prism Shake: Slow to Fast, 180°
	240~255	Stop
CH10	0~255	Cyan
CH11	0~255	Magenta
CH12	0~255	Yellow
CH13	0~255	CMY Macro
CH14	0~255	Frost
CH15	0~255	Zoom
CH16	0~255	Focus
CH17	0~255	Pan
CH18	0~255	Pan Fine
CH19	0~255	Tilt
CH20	0~255	Tilt Fine
CH21	0~255	Pan / Tilt Speed: Fast to Slow
	FUNCTION	
	0~13	No Function
	14~24	Close While Pan / Tilt
	25~35	Close While Gobo Shake
	36~46	Close While Color Change
	47~57	Close While Selecting Prism
	58~68	Close While Selecting Frost
	69~79	Close While Pan / Tilt, Gobo, Color, Focus, Frost Change
	80~90	Close While Gobo, Color, Focus, Frost Change
	91~123	No Function
	124~134	Reverse Display: Wait 5 Seconds
	135~145	Forward Display: Wait 5 Seconds
	146~255	No Function
	LAMP CONTROL	
	0~31	No Function
	32~63	Reduce Power
	64~159	No Function
	160~191	Lamp Off: Wait 5 Seconds
	192~223	No Function
	224~255	Lamp On: Wait 5 Seconds