

Acue Lighting 20R Mega Beam Moving Head Bulb

<u>DMX Channels</u>			
<u>Channel</u>		<u>DMX Range</u>	<u>Function</u>
24	28		
CH1	CH1	CYAN COLOR WHEEL	
		0~255	Linear Movement
CH2	CH2	MAGENTA COLOR WHEEL	
		0~255	Linear Movement
CH3	CH3	YELLOW COLOR WHEEL	
		0~255	Linear Movement
CH4	CH4	0~255	Color 1
CH5	CH5	0~255	Color 2
CH6	CH6	0~255	Color 3
CH7	CH7	STROBE	
		0~3	Light Off
		4~103	Linear Strobe Speed: Slow to Fast
		104~107	Light Off
		108~207	Linear Pulse Speed: Fast to Slow
		208~212	Light Off

		213~225	Random Strobe: Slow
		226~238	Random Strobe: Medium
		239~251	Random Strobe: Fast
		252~255	Light On
CH8	CH8	0~255	Linear Dimmer: 0-100%
CH9	CH9	0~255	Linear Dimmer Fine
		STATIC GOBO CHANGE	
		0	Empty
		4	Gobo 1
		8	Gobo 2
		12	Gobo 3
		16	Gobo 4
		19	Gobo 5
		23	Gobo 6
		27	Gobo 7
		31	Gobo 8
		35	Gobo 9
		38	Gobo 10
		42	Gobo 11
		46	Gobo 12
		50	Gobo 13
		54	Gobo 14
		57	Gobo 15
		61	Gobo 16
		65	Gobo 17
		69	Gobo 18
CH10	CH10	72~113	CW Rotation: Fast to Slow
		114~117	Stop Rotation

		118~159	CCW Rotation: Slow to Fast
		160~165	Gobo 1 Shake: Slow to Fast
		166~170	Gobo 2 Shake: Slow to Fast
		171~175	Gobo 3 Shake: Slow to Fast
		176~181	Gobo 4 Shake: Slow to Fast
		182~186	Gobo 5 Shake: Slow to Fast
		187~191	Gobo 6 Shake: Slow to Fast
		192~197	Gobo 7 Shake: Slow to Fast
		198~202	Gobo 8 Shake: Slow to Fast
		203~207	Gobo 9 Shake: Slow to Fast
		208~214	Gobo 10 Shake: Slow to Fast
		215~218	Gobo 11 Shake: Slow to Fast
		219~223	Gobo 12 Shake: Slow to Fast
		224~229	Gobo 13 Shake: Slow to Fast
		230~234	Gobo 14 Shake: Slow to Fast
		235~239	Gobo 15 Shake: Slow to Fast
		240~245	Gobo 16 Shake: Slow to Fast
		246~250	Gobo 17 Shake: Slow to Fast
		251~255	Gobo 18 Shake: Slow to Fast
CH11	CH11	ROTATING GOBO SELECT	
		0~16	Empty
		17~32	Gobo 1
		33~48	Gobo 2
		49~64	Gobo 3
		65~81	Gobo 4
		82~97	Gobo 5
		98~113	Gobo 6
		114~129	Gobo 7
		130~147	Gobo 1 Shake: Slow to Fast
		148~165	Gobo 2 Shake: Slow to Fast

		166~183	Gobo 3 Shake: Slow to Fast
		184~201	Gobo 4 Shake: Slow to Fast
		202~219	Gobo 5 Shake: Slow to Fast
		220~237	Gobo 6 Shake: Slow to Fast
		238~255	Gobo 7 Shake: Slow to Fast
CH12	CH12	GOBO ROTATION	
		0~21	0-90°
		21~42	90-180°
		43~63	180-270°
		64~84	270-360°
		85~105	360-450°
		106~127	450-540°
		128~190	CW Rotation: Fast to Slow
		191~192	Stop Rotation
193~255	CCW Rotation: Slow to Fast		
CH13	CH13	0~255	Gobo Fine Rotation
CH14	CH14	PRISM INSERTION	
		0~127	Prism Out
		128~255	Prism In
CH15	CH15	PRISM ROTATION	
		0~21	0-90°
		21~41	90-180°
		42~63	180-270°
		64~84	270-360°
		85~105	360-450°
		106~127	450-540°
		128~190	CW Rotation: Fast to Slow
		191~192	Stop Rotation
193~255	CCW Rotation: Slow to Fast		

CH16	CH16	0~255	Frost
CH17	CH17	0~255	Focus
CH18	CH18	0~255	Pan
CH19	CH19	0~255	Pan Fine
CH20	CH20	0~255	Tilt
CH21	CH21	0~255	Tilt Fine
CH22	CH22	FUNCTION (Stay in Range for 5 Seconds to Activate)	
		0~11	No Function
		12~24	Pan / Tilt Speed: Fast (Default)
		25~37	Pan / Tilt Speed: Normal
		63~75	CMY Range: Full (Default)
		76~87	CMY Range: Limited
		88~101	CMY Shortcut: On (Default)
		102~114	CMY Shortcut : Off
		115~255	No Function
CH23	CH23	RESET (Stay in Range for 5 Seconds to Activate)	
		0~25	No Function
		26~76	Zoom Reset
		77~127	Pan / Tilt Reset
		128~255	Complete Reset Reset
CH24	CH24	LAMP CONTROL (Stay in Range for 5 Seconds to Activate)	
		0~25	No Function
		26~100	Lamp Off
		101~255	Lamp On
CH25	CH25	Pan / Tilt Time	
		0~255	Pan, Pan Fine / Tilt & Tilt Fine
CH26	CH26	Color Time	
		0~255	Cyan, Magenta & Yellow
CH27		Beam Time	

	CH27	0~255	Dimmer, Frost, Prism & Focus
	CH28		Gobo Time
		0~255	Static Gobo & Rotating Gobo