

Acue Lighting 7R Beam Double Prism

<u>DMX 17 Channel</u>		
<u>Channel</u>	<u>DMX Range</u>	<u>Function</u>
CH1	COLOR SELECTION	
	0~4	White
	5~9	White / Red
	10~14	Red
	15~19	Red / Yellow
	20~24	Yellow
	25~29	Yellow / Aquamarine
	30~34	Aquamarine
	35~39	Aquamarine / Green
	40~44	Green
	45~49	Green / Light Yellow
	50~54	Light Yellow
	55~59	Light Yellow / Pink
	60~64	Pink
	65~69	Pink / Deep Blue
	70~74	Deep Blue
75~79	Deep Blue / Light Blue	

	80~84	Light Blue
	85~89	Light Blue / Light Green
	90~94	Light Green
	95~99	Light Green / Purple
	100~104	Purple
	105~109	Purple / Cyan
	110~114	Cyan
	115~119	Cyan / Amber
	120~124	Amber
	125~129	Amber / Violet
	130~134	Violet
	135~139	Violet / Null
	140~144	Null
	145~149	Null
	150~200	CW Color Scroll: Fast to Slow
	201~255	CCW Color Scroll: Slow to Fast
	STROBE	
	0~3	Shutter Closed
	4~103	Strobe: Slow to Fast
	104~107	Shutter Open
	108~207	Pulse: Slow to Fast
	208~212	Shutter Open
	213~225	Random Strobe: Slow
	226~238	Random Strobe: Medium
	239~251	Random Strobe: Fast
	252~255	Open Shutter
CH3	0~255	Master Dimmer: 0-100%
	GOBO	
	0~4	White

CH4

5~9	Gobo 1
10~14	Gobo 2
15~19	Gobo 3
20~24	Gobo 4
25~29	Gobo 5
30~34	Gobo 6
35~39	Gobo 7
40~44	Gobo 8
45~49	Gobo 9
50~54	Gobo 10
55~59	Gobo 11
60~64	Gobo 12
65~69	Gobo 13
70~74	Gobo 14
75~79	Gobo 15
80~84	Gobo 16
85~89	Gobo 17
90~129	CW Gobo Rotation: Fast to Slow
130~135	Stop
136~170	CCW Gobo Rotation: Slow to Fast
171~175	Gobo 1 Shake: Slow to Fast
176~180	Gobo 2 Shake: Slow
181~185	Gobo 3 Shake: Slow
186~190	Gobo 4 Shake: Slow
191~195	Gobo 5 Shake: Slow
196~200	Gobo 6 Shake: Slow
201~205	Gobo 7 Shake: Fast
206~210	Gobo 8 Shake: Fast
211~215	Gobo 9 Shake: Fast

	216~220	Gobo 10 Shake: Fast
	221~225	Gobo 11 Shake: Fast
	226~230	Gobo 12 Shake: Fast
	231~235	Gobo 13 Shake: Fast
	236~240	Gobo 14 Shake: Fast
	241~245	Gobo 15 Shake: Fast
	246~250	Gobo 16 Shake: Fast
	251~255	Gobo 17 Shake: Fast
CH5	PRISM 1	
	0~127	Prism Extracted
	128~255	24 Prism Inserted
CH6	PRISM ROTATION	
	0~65	Fixed Prism
	66~127	CW Rotation: Slow to Fast
	128~191	CCW Rotation: Slow to Fast
	192~255	CW & CCW Rotation: Slow to Fast
CH7	PRISM 2	
	0~127	Prism Extracted
	128~255	6 Prism Inserted
CH8	PRISM ROTATION	
	0~65	Fixed Prism
	66~127	CW Rotation: Slow to Fast
	128~191	CCW Rotation: Slow to Fast
	192~255	CW & CCW Rotation: Slow to Fast
CH9	0~255	Focus
CH10	0~255	Pan
CH11	0~255	Pan Fine
CH12	0~255	Tilt
CH13	0~255	Tilt Fine
	FROST	

CH14	0~127	Frost Extracted
	128~255	Frost Inserted
CH15	RESET	
	0~25	No Function
	26~76	Effects Motor Reset
	77~127	Pan / Tilt Reset
	128~255	Complete Reset
CH16	Lamp Control	
	0~9	No Function
	10~100	Off
	101~255	On
CH17	0~255	Pan / Tilt Speed