

Acue Lighting 7R Pro Moving Head

<u>DMX 23 Channel</u>		
<u>Channel</u>	<u>DMX Range</u>	<u>Function</u>
CH1	COLOR	
	0~4	White
	5~127	Color Selection
	128~255	Color Scroll: Slow to Fast
CH2	STROBE	
	0~3	Shutter Closed
	4~103	Strobe: Slow to Fast
	104~107	Shutter Open
	108~207	Pulse: Slow to Fast
	208~212	Shutter Open
	213~225	Random Strobe: Slow
	226~238	Random Strobe: Medium
	239~251	Random Strobe: Fast
252~255	Shutter Open	
CH3	0~255	Master Dimmer: 0-100%
CH4	GOBO	
	0~3	White
	4~71	Static Gobo Selection
	72~113	CW Rotation: Fast to Slow
	114~117	Stop Rotation
	118~159	CCW Rotation: Slow to Fast
CH5	PRISM	
	0~127	No Function
	128~255	Insert Prism
CH6	PRISM ROTATION	
	0	No Function
	1~127	Manual Rotation
	128~190	CCW Rotation: Fast to Slow
	191~192	Stop Rotation
193~255	CW Rotation: Slow to Fast	
CH7	NA	No Function
CH8	0~255	Frsot

CH9	0~255	Focus
CH10	0~255	Pan
CH11	0~255	Pan Fine
CH12	0~255	Tilt
CH13	0~255	Tilt Fine
CH14	0~255	Pan / Tilt Speed: Fast to Slow
CH15	FUNCTION	
	0~123	No Function
	124~134	Display Reverse: Wait 5 Seconds
	135~145	Display Forward: Wait 5 Seconds
	146~184	No Function
	185~191	Effect Reset
	192~198	Pan / Tilt Reset
	199~211	Complete Reset
212~255	No Function	
CH16	LAMP CONTROL	
	0~31	No Function
	32~63	Reduce Power
	64~159	No Function
	160~191	Lamp Off: Wait 5 Seconds
	192~223	No Function
	224~255	Lamp On: Wait 5 Seconds