

# Acue Lighting Mini 7R Beam Moving Head

<b>DMX 16 Channel</b>		
<b>Channel</b>	<b>DMX Range</b>	<b>Function</b>
<b>COLOR SELECTION</b>		
CH1	0~8	Blank
	9~17	Color 1
	18~26	Color 2
	27~35	Color 3
	36~44	Color 4
	45~53	Color 5
	54~62	Color 6
	63~71	Color 7
	72~80	Color 8
	81~89	Color 9
	90~98	Color 10
	99~107	Color 11
	108~116	Color 12
	117~127	Color 13
128~191	CW Color Scroll: Fast to Slow	
192~255	CCW Color Scroll: Slow to Fast	
<b>STROBE</b>		
CH2	0~3	Off
	4~103	Strobe Effect 1: Slow to Fast
	104~107	Shutter Open
	108~207	Strobe Effect 2: Slow to Fast
	208~211	Shutter Open
	212~251	Strobe Effect 3: Slow to Fast
	252~255	Shutter Open
CH3	0~255	Master Dimmer: 0-100%
<b>GOBO WHEEL</b>		
CH4	0~4	Blank
	5~10	Gobo 1
	11~16	Gobo 2
	17~22	Gobo 3
	23~28	Gobo 4
	29~34	Gobo 5
	35~40	Gobo 6
	41~46	Gobo 7
	47~52	Gobo 8
	53~58	Gobo 9
	59~64	Gobo 10
	65~70	Gobo 11
	71~76	Gobo 12
	77~82	Gobo 13
	83~88	Gobo 14
	89~96	Gobo 1 Shake: Slow to Fast
	97~104	Gobo 2 Shake: Slow to Fast
	105~112	Gobo 3 Shake: Slow to Fast
	113~120	Gobo 4 Shake: Slow to Fast
	121~128	Gobo 5 Shake: Slow to Fast
129~136	Gobo 6 Shake: Slow to Fast	

	137~144	Gobo 7 Shake: Slow to Fast
	145~152	Gobo 8 Shake: Slow to Fast
	153~160	Gobo 9 Shake: Slow to Fast
	161~168	Gobo 10 Shake: Slow to Fast
	169~176	Gobo 11 Shake: Slow to Fast
	177~184	Gobo 12 Shake: Slow to Fast
	185~190	Gobo 13 Shake: Slow to Fast
	191~223	CW Gobo Scroll: Fast to Slow
	224~255	CCW Gobo Scroll: Slow to fast
CH5	0~127 128~255	PRISM Prism Off Prism On
CH6	0~128 129~192 193~255	PRISM ROTATION Prism Rotation CW Rotation: Fast to Slow CCW Rotation: Slow to Fast
CH7	0~255	Half Color Effect
CH8	0~255	Frost
CH9	0~255	Focus
CH10	0~255	Pan: 540° Range
CH11	0~255	Pan Fine
CH12	0~255	Tilt: 270° Range
CH13	0~255	Tilt Fine
CH14	0~255	Pan / Tilt Speed: Fast to Slow
CH15	0~255	Reset
CH16		LAMP
	0~99	Lamp Off
	100~255	Lamp On