

Acue Lighting 90W Cliff Jumper

<u>DMX 11 Channel</u>		
<u>Channel</u>	<u>DMX Range</u>	<u>Function</u>
CH1	0~255	Pan: 0-540°
CH2	0~255	Tilt: 0-270°
CH3	0~255	Pan / Tilt Speed: Fast to Slow
CH4	0~255	75W Master Dimmer: 0-100%
STROBE		
CH5	0~5	Open Shutter
	6~249	Shutter Speed: Slow to Fast
	250~255	Open Shutter
COLOR SELECTION		
CH6	0~9	White
	10~19	White / Red
	20~29	Red
	30~39	Red / Green
	40~49	Green
	50~59	Green / Blue
	60~69	Blue
	70~79	Blue / Yellow
	80~89	Yellow
	90~99	Yellow / Purple
	100~109	Purple
	110~119	Purple / Aqua
	120~129	Aqua
	130~139	Aqua / Cambridge Blue
	140~149	Cambridge Blue
150~180	Cambridge / White	
181~255	Rainbow Effect: Slow to Fast	
CH7	0~255	Focus
ROTATING GOBOS		
CH8	0~19	White
	20~39	Gobo 1
	40~59	Gobo 2
	60~79	Gobo 3
	80~99	Gobo 4
	100~119	Gobo 5
	120~139	Gobo 6
	140~255	CW & CCW Rotation: Slow to Fast
GOBO AUTO-ROTATION		
CH9	0~19	No Function
	20~139	CW Rotation: Slow to Fast

	140~255	CCW Rotation: Slow to Fast
CH10	STATIC GOBOS	
	0~9	White
	10~19	Gobo 1
	20~39	Gobo 2
	40~59	Gobo 3
	60~79	Gobo 4
	80~99	Gobo 5
	100~119	Gobo 6
	120~139	Gobo 7
	140~159	Gobo 8
160~255	CW & CCW Rotation: Slow to Fast	
CH11	PRISM	
	0~19	Off
	20~63	On
	64~255	Rotation: Fast to Slow

DMX 14 Channel

Channel	DMX Range	Function
CH1	0~255	Pan: 0-540°
CH2	0~255	Pan Fine
CH3	0~255	Tilt: 0-270°
CH4	0~255	Tilt Fine
CH5	0~255	Pan / Tilt Speed: Fast to Slow
CH6	0~255	75W Master Dimmer: 0-100%
CH7	STROBE	
	0~5	Open Shutter
	6~249	Shutter Speed: Slow to Fast
	250~255	Open Shutter
CH8	COLOR SELECTION	
	0~9	White
	10~19	White / Red
	20~29	Red
	30~39	Red / Green
	40~49	Green
	50~59	Green / Blue
	60~69	Blue
	70~79	Blue / Yellow
	80~89	Yellow
	90~99	Yellow / Purple
	100~109	Purple
	110~119	Purple / Aqua
	120~129	Aqua
	130~139	Aqua / Cambridge Blue
140~149	Cambridge Blue	
150~180	Cambridge / White	
181~255	Rainbow Effect: Slow to Fast	
CH9	0~255	Focus
CH10	ROTATING GOBOS	
	0~19	White
	20~39	Gobo 1
	40~59	Gobo 2
	60~79	Gobo 3
	80~99	Gobo 4
	100~119	Gobo 5
	120~139	Gobo 6
140~255	CW & CCW Rotation: Slow to Fast	
CH11	GOBO AUTO-ROTATION	
	0~19	No Function
	20~139	CW Rotation: Slow to Fast
	140~255	CCW Rotation: Slow to Fast
	STATIC GOBOS	
	0~9	White
	10~19	Gobo 1

CH12	20~39	Gobo 2
	40~59	Gobo 3
	60~79	Gobo 4
	80~99	Gobo 5
	100~119	Gobo 6
	120~139	Gobo 7
	140~159	Gobo 8
	160~255	CW & CCW Rotation: Slow to Fast
CH13	PRISM	
	0~19	Off
	20~63	On
	64~255	Rotation: Fast to Slow
CH14	1~199	No Function

DMX 16 Channel

Channel	DMX Range	Function
CH1	0~255	Pan: 0-540°
CH2	0~255	Pan Fine
CH3	0~255	Tilt: 0-270°
CH4	0~255	Tilt Fine
CH5	0~255	Pan / Tilt Speed: Fast to Slow
CH6	0~255	75W Master Dimmer: 0-100%
CH7	STROBE	
	0~5	Open Shutter
	6~249	Shutter Speed: Slow to Fast
	250~255	Open Shutter
CH8	COLOR SELECTION	
	0~9	White
	10~19	White / Red
	20~29	Red
	30~39	Red / Green
	40~49	Green
	50~59	Green / Blue
	60~69	Blue
	70~79	Blue / Yellow
	80~89	Yellow
	90~99	Yellow / Purple
	100~109	Purple
	110~119	Purple / Aqua
	120~129	Aqua
	130~139	Aqua / Cambridge Blue
140~149	Cambridge Blue	
150~180	Cambridge / White	
181~255	Rainbow Effect: Slow to Fast	
CH9	0~255	Focus
CH10	ROTATING GOBOS	
	0~19	White
	20~39	Gobo 1
	40~59	Gobo 2
	60~79	Gobo 3
	80~99	Gobo 4
	100~119	Gobo 5
	120~139	Gobo 6
140~255	CW & CCW Rotation: Slow to Fast	
CH11	GOBO AUTO-ROTATION	
	0~19	No Function
	20~139	CW Rotation: Slow to Fast
	140~255	CCW Rotation: Slow to Fast
CH12	0~255	Rotating Gobo Shake: Slow to Fast
	STATIC GOBOS	
	0~9	White

CH13	10~19	Gobo 1
	20~39	Gobo 2
	40~59	Gobo 3
	60~79	Gobo 4
	80~99	Gobo 5
	100~119	Gobo 6
	120~139	Gobo 7
	140~159	Gobo 8
	160~255	CW & CCW Rotation: Slow to Fast
CH14	0~255	Static Gobo Shake
CH15	PRISM	
	0~19	Off
	20~63	On
	64~255	Rotation: Fast to Slow
CH16	RESET	
	1~199	No Function
	200~219	Reset: Stay in Range for 3 Seconds
	220~255	No Function