

Acue Lighting Spider 3 LED Moving Head

DMX 16 Channel		
<u>Channel</u>	<u>DMX Range</u>	<u>Function</u>
Channel 1	0~255	X Rotation: 0-630°
Channel 2	0~255	Y Rotation: 0-185°
Channel 3	0~255	Y2 Rotation: 0-185°
Channel 4	0~255	Master Dimmer: 0-100%
Channel 5	STROBE	
	0~9	Off
	10~255	Speed: Slow to Fast
Channel 6	0~255	R Dimmer: 0-100%
Channel 7	0~255	G Dimmer: 0-100%
Channel 8	0~255	B Dimmer: 0-100%
Channel 9	0~255	W Dimmer: 0-100%
Channel 10	EFFECT	
	0~7	Off
	8~17	Effect 1
	18~27	Effect 2
	28~37	Effect 3
	38~47	Effect 4
	48~57	Effect 5
	58~67	Effect 6
	68~77	Effect 7
	78~87	Effect 8
	88~97	Effect 9
	98~107	Effect 10
	108~117	Effect 11
	118~127	Effect 12
	128~136	Effect 13
	137~146	Effect 14
	147~156	Effect 15
	157~166	Effect 16
	167~176	Effect 17
	177~186	Effect 18
	187~196	Effect 19
	197~206	Effect 20
	207~216	Effect 21
	217~226	Effect 22
	227~236	Effect 23
	237~246	Effect 24
247~255	Effect 25	
Channel 11	0~255	Speed: Slow to Fast

DMX 37 Channel		
<u>Channel</u>	<u>DMX Range</u>	<u>Function</u>
Channel 1	0~255	X Rotation: 0-630°
Channel 2	0~255	Y Rotation: 0-185°
Channel 3	0~255	Y2 Rotation: 0-185°

Channel 4	0~255	Master Dimmer: 0-100%
Channel 5	STROBE	
	0~9	Off
	10~255	Speed: Slow to Fast
Channel 6	0~255	R Dimmer 1: 0-100%
Channel 7	0~255	G Dimmer 1: 0-100%
Channel 8	0~255	B Dimmer 1: 0-100%
Channel 9	0~255	W Dimmer 1: 0-100%
Channel 10	0~255	R Dimmer 2: 0-100%
Channel 11	0~255	G Dimmer 2: 0-100%
Channel 12	0~255	B Dimmer 2: 0-100%
Channel 13	0~255	W Dimmer 2: 0-100%
Channel 14	0~255	R Dimmer 3: 0-100%
Channel 15	0~255	G Dimmer 3: 0-100%
Channel 16	0~255	B Dimmer 3: 0-100%
Channel 17	0~255	W Dimmer 3: 0-100%
Channel 18	0~255	R Dimmer 4: 0-100%
Channel 19	0~255	G Dimmer 4: 0-100%
Channel 20	0~255	B Dimmer 4: 0-100%
Channel 21	0~255	W Dimmer 4: 0-100%
Channel 22	0~255	R Dimmer 5: 0-100%
Channel 23	0~255	G Dimmer 5: 0-100%
Channel 24	0~255	B Dimmer 5: 0-100%
Channel 25	0~255	W Dimmer 5: 0-100%
Channel 26	0~255	R Dimmer 6: 0-100%
Channel 27	0~255	G Dimmer 6: 0-100%
Channel 28	0~255	B Dimmer 6: 0-100%
Channel 29	0~255	W Dimmer 6: 0-100%
Channel 30	0~255	R Dimmer 7: 0-100%
Channel 31	0~255	G Dimmer 7: 0-100%
Channel 32	0~255	B Dimmer 7: 0-100%
Channel 33	0~255	W Dimmer 7: 0-100%
Channel 34	0~255	R Dimmer 8: 0-100%
Channel 35	0~255	G Dimmer 8: 0-100%
Channel 36	0~255	B Dimmer 8: 0-100%
Channel 37	0~255	W Dimmer 8: 0-100%