

# Acue Lighting Twin Head

<u>DMX 10 Channel</u>		
<u>Channel</u>	<u>DMX Range</u>	<u>Function</u>
CH1	0~255	Pan: 0-540°
CH2	<b>TILT MOTOR 1</b>	
	0~127	360°
	128~191	CW Rotation: Fast to Slow
	192~255	CCW Rotation: Slow to Fast
CH3	<b>TILT MOTOR 2</b>	
	0~127	360°
	128~191	CW Rotation: Fast to Slow
	192~255	CCW Rotation: Slow to Fast
CH4	0~255	Master Dimmer: 0-100%
CH5	<b>STROBE</b>	
	0~15	Open Shutter
	16~131	Speed: Fast to Slow
	132~139	Open Shutter
	140~181	Pulse Mode 1
	182~189	Open Shutter
	190~231	Pulse Mode 2
	232~239	Open Shutter
	240~247	Random Strobe
	248~255	Open Shutter
CH6	0~255	R Dimmer: 0-100%
CH7	0~255	G Dimmer: 0-100%
CH8	0~255	B Dimmer: 0-100%
CH9	0~255	W Dimmer: 0-100%

CH10	MACRO	
	0~69	No Function
	70~79	
	80~89	
	90~199	No Function
	200~209	Reset
	210~249	No Function
	250~255	Sound Active (Wait 5 Seconds)

<u>DMX 21 Channel</u>		
<u>Channel</u>	<u>DMX Range</u>	<u>Function</u>
CH1	0~255	Pan: 0-540°
CH2	0~255	Pan Fine
CH3	0~127	Tilt Motor 1: 360°
CH4	TILT MOTOR 1	
	0~9	No Function
	10~127	CW Rotation: Fast to Slow
	128~255	CCW Rotation: Slow to Fast
CH5	0~255	Tilt Motor 1: Fine
CH6	0~127	Tilt Motor 2: 360°
CH7	TILT MOTOR 2	
	0~9	No Function
	10~127	CW Rotation: Fast to Slow
	128~255	CCW Rotation: Slow to Fast
CH8	0~255	Tilt Motor 2: Fine
CH9	0~255	Master Dimmer: 0-100%
CH10	STROBE	
	0~15	Open Shutter
	16~131	Speed: Fast to Slow
	132~139	Open Shutter
	140~181	Pulse Mode 1
	182~189	Open Shutter
	190~231	Pulse Mode 2
	232~239	Open Shutter
240~247	Random Strobe	
	248~255	Open Shutter

CH11	0~255	R Dimmer 1: 0-100%
CH12	0~255	G Dimmer 1: 0-100%
CH13	0~255	B Dimmer 1: 0-100%
CH14	0~255	W Dimmer 1: 0-100%
CH15	0~255	R Dimmer 2: 0-100%
CH16	0~255	G Dimmer 2: 0-100%
CH17	0~255	B Dimmer 2: 0-100%
CH18	0~255	W Dimmer 2: 0-100%
CH19	<b>COLOR EFFECTS</b>	
	0~7	No Function
	8~127	Color Select
	128~191	Color Jump Change
	192~255	Gradual Color Change
CH20	0~255	Color Effects Speed: Slow to Fast
CH21	<b>MACRO</b>	
	0~69	No Function
	70~79	Auto 1
	80~89	Auto 2
	90~199	No Function
	200~209	Reset
	210~249	No Function
	250~255	Sound Mode: Wait 5 Seconds