

Acue Lighting Pixel FX

DMX 2 Channel

<u>Channel</u>	<u>DMX Range</u>	<u>Function</u>
CH1	0-9	Blackout
	10-34	DMX Auto Program 1
	45-79	DMX Auto Program 2
	80-114	DMX Auto Program 3
	115-149	DMX Auto Program 4
	150-184	DMX Auto Program 5
	185-219	DMX Auto Program 6
	220-254	DMX Auto Program 7
	255	DMX Sound Program
CH2	0-255	DMX Auto Program Speed (slow - fast)

DMX 5 Channel

<u>Channel</u>	<u>DMX Range</u>	<u>Function</u>
	0-9	Cree LED OFF
	10-19	All LED ON, CH4 Dimmer (0-100%)
	20-29	Cree LED Program 1
	30-39	Cree LED Program 2
	40-49	Cree LED Program 3
	50-59	Cree LED Program 4
	60-69	Cree LED Program 5
	70-79	Cree LED Program 6
	80-89	Cree LED Program 7
	90-99	Cree LED Program 8

CH1	100-109	Cree LED Program 9	Cree 14W LED Program
	110-119	Cree LED Program 10	
	120-129	Cree LED Program 11	
	130-139	Cree LED Program 12	
	140-149	Cree LED Program 13	
	150-159	Cree LED Program 14	
	160-169	Cree LED Program 15	
	170-179	Cree LED Program 16	
	180-189	Cree LED Program 17	
	190-199	Cree LED Program 18	
	200-209	Cree LED Program 19	
	210-219	Cree LED Program 20	
	220-229	Cree LED Program 21	
	230-239	Cree LED Program 22	
240-255	Cree LED Program 23		
CH2	0-9	5050-RGB OFF	5050-RGB Program
	10-31	All 5050-RGB ON, CH4 Dimmer (0-100%)	
	32-53	5050-RGB Program 1	
	54-75	5050-RGB Program 2	
	76-97	5050-RGB Program 3	
	98-119	5050-RGB Program 4	
	120-141	5050-RGB Program 5	
	142-163	5050-RGB Program 6	
	164-185	5050-RGB Program 7	
	186-207	5050-RGB Program 8	
	208-229	5050-RGB Program 9	
	230-251	5050-RGB Program 10	
	252-255	5050-RGB Program 11	
CH3	0-9	5730-SMD OFF	5730-SMD Program
	10-27	All 5730-SMD ON, CH4 Dimmer (0-100%)	
	28-45	5730-SMD Program 1	
	46-63	5730-SMD Program 2	
	64-81	5730-SMD Program 3	
	82-99	5730-SMD Program 4	
	100-117	5730-SMD Program 5	
	118-135	5730-SMD Program 6	
	136-153	5730-SMD Program 7	
	154-171	5730-SMD Program 8	
	172-189	5730-SMD Program 9	
190-207	5730-SMD Program 10		

	208-225	5730-SMD Program 11	
	226-243	5730-SMD Program 12	
	244-255	5730-SMD Program 13	
CH4	0-255	Program Speed (slow - fast)	
CH5	0-9	No Function	Strobe
	10-255	Slow - Fast	

DMX 34 Channel

<u>Channel</u>	<u>DMX Range</u>	<u>Function</u>
CH1	0-255	Cree LED 1 (0-100%)
CH2	0-255	Cree LED 2 (0-100%)
CH3	0-255	Cree LED 3 (0-100%)
CH4	0-255	Cree LED 4 (0-100%)
CH5	0-255	Cree LED 5 (0-100%)
CH6	0-255	Cree LED 6 (0-100%)
CH7	0-255	Cree LED 7 (0-100%)
CH8	0-255	Cree LED 8 (0-100%)
CH9	0-255	Cree LED 9 (0-100%)
CH10	0-255	Cree LED 10 (0-100%)
CH11	0-255	Cree LED 11 (0-100%)
CH12	0-255	Cree LED 12 (0-100%)
CH13	0-255	Cree LED 13 (0-100%)
CH14	0-255	Cree LED 14 (0-100%)
CH15	0-255	5050-RGB Red 1 (0-100%)
CH16	0-255	5050-RGB Green 1 (0-100%)
CH17	0-255	5050-RGB Blue 1 (0-100%)
CH18	0-255	5050-RGB Red 2 (0-100%)
CH19	0-255	5050-RGB Green 2 (0-100%)
CH20	0-255	5050-RGB Blue 2 (0-100%)
CH21	0-255	5050-RGB Red 3 (0-100%)
CH22	0-255	5050-RGB Green 3 (0-100%)
CH23	0-255	5050-RGB Blue 3 (0-100%)
CH24	0-255	5050-RGB Red 4 (0-100%)
CH25	0-255	5050-RGB Green 4 (0-100%)
CH26	0-255	5050-RGB Blue 4 (0-100%)
CH27	0-255	5050-RGB Red 5 (0-100%)

CH28	0-255	5050-RGB Green 5 (0-100%)
CH29	0-255	5050-RGB Blue 5 (0-100%)
CH30	0-255	5730-SMD 1 (0-100%)
CH31	0-255	5730-SMD 2 (0-100%)
CH32	0-255	5730-SMD 3 (0-100%)
CH33	0-255	5730-SMD 4 (0-100%)
CH34	0-255	5730-SMD 5 (0-100%)

DMX 37 Channel

<u>Channel</u>	<u>DMX Range</u>	<u>Function</u>
CH1	0-255	Cree LED 1 (0-100%)
CH2	0-255	Cree LED 2 (0-100%)
CH3	0-255	Cree LED 3 (0-100%)
CH4	0-255	Cree LED 4 (0-100%)
CH5	0-255	Cree LED 5 (0-100%)
CH6	0-255	Cree LED 6 (0-100%)
CH7	0-255	Cree LED 7 (0-100%)
CH8	0-255	Cree LED 8 (0-100%)
CH9	0-255	Cree LED 9 (0-100%)
CH10	0-255	Cree LED 10 (0-100%)
CH11	0-255	Cree LED 11 (0-100%)
CH12	0-255	Cree LED 12 (0-100%)
CH13	0-255	Cree LED 13 (0-100%)
CH14	0-255	Cree LED 14 (0-100%)
CH15	0-255	5050-RGB Red 1 (0-100%)
CH16	0-255	5050-RGB Green 1 (0-100%)
CH17	0-255	5050-RGB Blue 1 (0-100%)
CH18	0-255	5050-RGB Red 2 (0-100%)
CH19	0-255	5050-RGB Green 2 (0-100%)
CH20	0-255	5050-RGB Blue 2 (0-100%)
CH21	0-255	5050-RGB Red 3 (0-100%)
CH22	0-255	5050-RGB Green 3 (0-100%)
CH23	0-255	5050-RGB Blue 3 (0-100%)
CH24	0-255	5050-RGB Red 4 (0-100%)
CH25	0-255	5050-RGB Green 4 (0-100%)
CH26	0-255	5050-RGB Blue 4 (0-100%)
CH27	0-255	5050-RGB Red 5 (0-100%)
CH28	0-255	5050-RGB Green 5 (0-100%)

CH29	0-255	5050-RGB Blue 5 (0-100%)	
CH30	0-255	5730-SMD 1 (0-100%)	
CH31	0-255	5730-SMD 2 (0-100%)	
CH32	0-255	5730-SMD 3 (0-100%)	
CH33	0-255	5730-SMD 4 (0-100%)	
CH34	0-255	5730-SMD 5 (0-100%)	
CH35	0-9	No Function	
	10-34	DMX Auto Program 1 (Random)	
	45-79	DMX Auto Program 2 (14W + 5050-RGB)	
	80-114	DMX Auto Program 3 (14W + 5730-SMD)	
	115-149	DMX Auto Program 4 (5050-RGB + 5730-SMD)	
	150-184	DMX Auto Program 5 (14W)	
	185-219	DMX Auto Program 6 (5050-RGB)	
	220-254	DMX Auto Program 7 (5730-SMD)	
	255	DMX Sound Program	
CH36	0-255	DMX Auto Program Speed (slow - fast)	
CH37	0-9	No Function	Strobe
	10-255	Slow - Fast	